

VANS CATALOG

VW T5, T6 AND FORD TRANSIT CUSTOM



ICOR 
automatically perfect

ACCESSORIES AND EQUIPMENT FOR VANS AND GLAZING VEHICLES

● FITTERS ● EQUIPMENT SUPPLIERS ● GLAZING INDUSTRY

TOOLS / MOULDINGS / CONSUMABLES / GLASS REPAIR KITS



WINDOW POD® : MODERN BLACKOUT BLINDS

PAGES 3 TO 5



CHAIR POD® : INTEGRATED TAILGATE CHAIRS

PAGE 6



BUILT-IN SLIDING DOOR TABLE

PAGE 7



STEPS AND THRESHOLD COVERS

PAGE 8



DOOR, BOOT AND POPTOP SEALS EDGE TRIMS

PAGE 9



BLINDS



WINDOW POD® : MODERN, BLACKOUT BLINDS



**CUSTOMISABLE
PRE-ASSEMBLED FRAME**



EASY TO INSTALL




**INSULATING, THERMAL
AND BLACKOUT**




**FLYSCREEN
OPTION**


1 FIND THE RIGHT BLIND FOR YOUR WINDOW

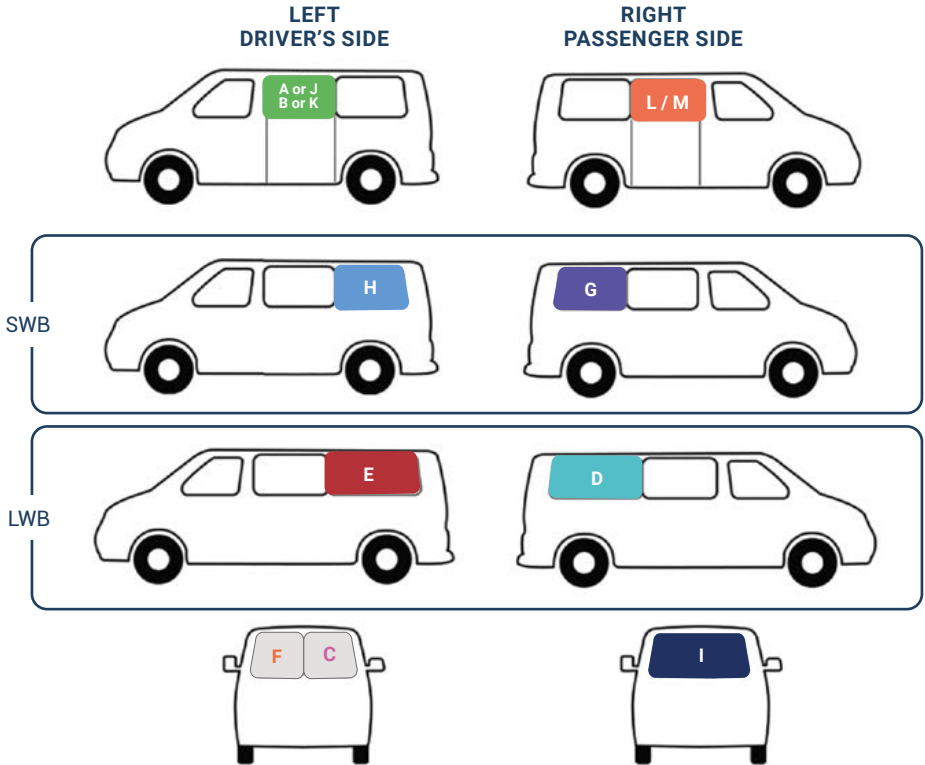


Blind position :	Zone	OEM/Factory		Aftermarket		Code
		Opening window	Fixed window	Opening window	Fixed window	
Behind driver	Left		✓			A
	Left	✓		✓		J
Driver sliding door	Left			✓	✓	B
	Left	✓				K
Passenger sliding door	Right			✓	✓	L
	Right	✓				M
LWB rear quarter	Right				✓	D
	Left				✓	E
SWB rear quarter	Right				✓	G
	Left				✓	H
Barn Door	Left					F
	Right				✓	C
Tailgate	Rear				✓	I

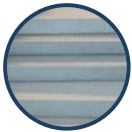2**CHOOSE THE COLOUR OF YOUR BLIND**

Iron

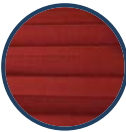

Wine

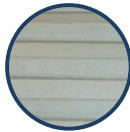

Cappuccino



Denim




Flame



Midnight




Teal

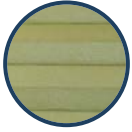

Fern




Gold

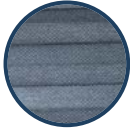

Slate




Lavender

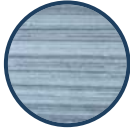

Storm



Russet

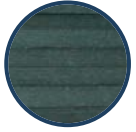

Raven

i

Indicative colours. Contact us for a colour chart.

3**CHOOSE THE FRAME****A**

A choice of 6 colours with a soft, carpet-effect finish.



Silver



Smoke



Graphite



Anthracite



Wheat



Black

i

Indicative colours. Contact us for a colour chart.

B

Naked Pod®: unfinished blind in black ABS.

**C**

On request: coloured frame with soft rubberised finish. (Spectrum collection).



INTEGRATED CHAIRS

**CHAIR POD® : CHAIRS INTEGRATED INTO THE TAILGATE
FOR A PERFECT OPTIMIZATION OF YOUR SPACE**



Easy to install in just a few minutes



For VW T5 and T6.

We recommend replacing the tailgate gas struts if their force is less than 1250 newtons.

INTEGRATED TABLE

LOC8 TABLE: IN THE SLIDING DOOR ON THE RIGHT FOR VW T5 / T6



Replace the existing VW trim with the Loc8 trim, reusing the original trim clips.



Quick and easy to install. Compatible with all VW T5 and T6 models manufactured from 2004 onwards.



STEPS AND THRESHOLD COVERS FOR VW T5 AND T6

SIDE DOORS

ABS step adapted to the two sliding side doors (driver's and passenger's side). Raised by 15 mm to fit fitted vans.



8579SXHVRD

110 x 21cm

REAR BARN DOORS

ABS step suitable for vans with rear barn doors. Sold with screw covers



8579BXHV

126 x 15,5cm

TAILGATE DOOR

ABS step suitable for vans with a tailgate. Sold with screw covers.



8579BXHV1H

126 x 15,5cm

DOOR, BOOT AND POPTOP SEALS



EDGE TRIMS



 Contact us to find out our references.

ICOR ALSO OFFERS CAR ACCESSORIES AND EQUIPMENT



MOLDINGS & PROFILES



WINDSHIELD DAMS



SUCTION CUPS



GLASS REPAIR SYSTEMS



BONDING PRODUCTS



SPECIFIC TOOLS



CLIPS



A-PILLARS



SENSORS & ADHESIVES



SENSOR GEL PADS



CAMERA BRACKETS




CONSUMABLES

OUR VANS PRODUCTS ON VIDEO



BLINDS

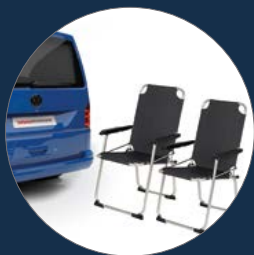

INTEGRATED CHAIRS



INTEGRATED TABLE

